


Attach a clamp plate to each u-bracket.

Insert two 3/8 x 1 in. carriage bolts through the clamp plate square holes and back of u-bracket. Secure loosely with 3/8 in. flange nuts.

Install the u-bracket on mount bar by sliding the clamp plate into vertical channel.

IMPORTANT: Note orientation of holes on u-bracket.

Adjust u-bracket height to 9 1/2 inches from the bottom of the u-bracket to the ground. Tighten flange nuts.

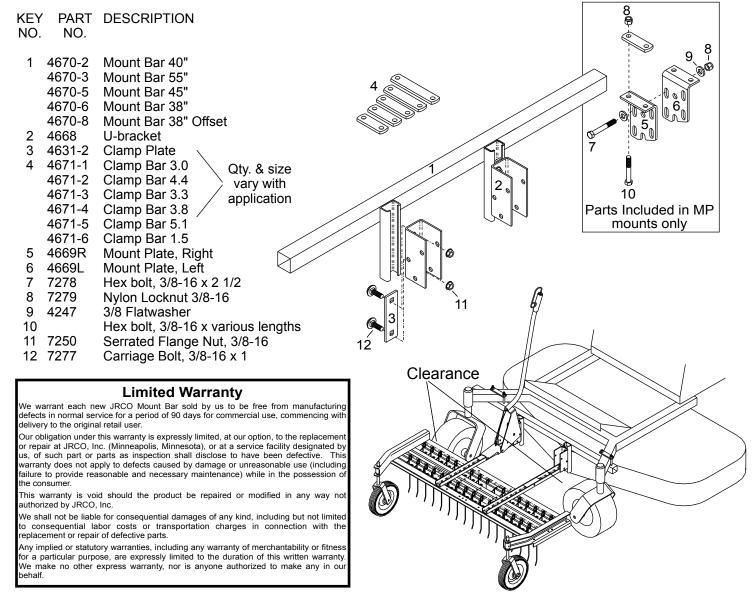

JRCO, Inc.

Minneapolis MN

800.966.8442

www.jrcoinc.com